


NOTE: If you are using a short window support bar or no support bar is required under the window then you must use DPC under the window sill. **OPTION 1:** It is acceptable to have both the DPC and support bar installed together.

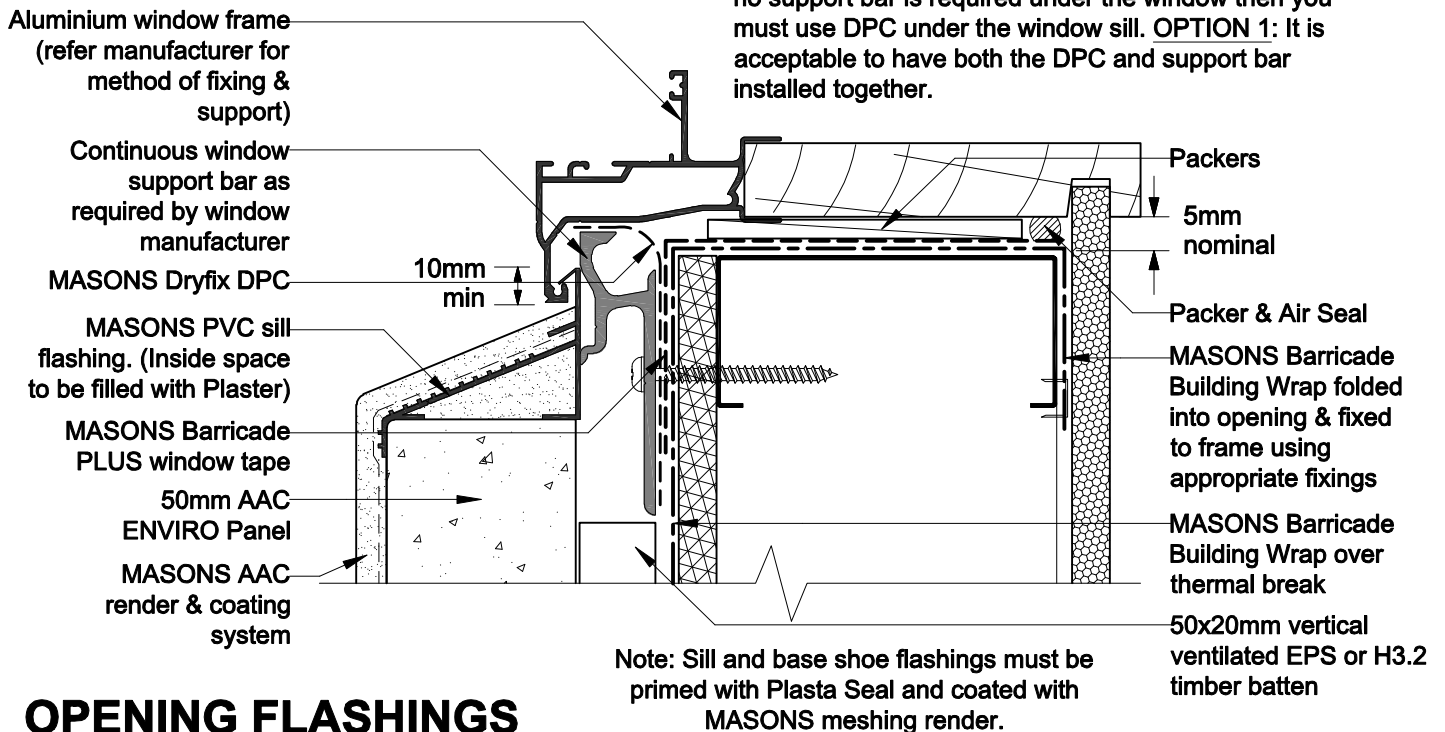

OPENING FLASHINGS

Window Sill with DPC Flashing

OPTION 1

Detail 57 Scale 1:2